

❖ TM-6740 CL / TMC-6740 CL

Progressive Scan CCD



- 1/3" progressive scan IT CCD imager (KAI-0340)
- 640(H) x 480(V) @ 200 fps
- 7.4 μ m square pixels
- Digital Camera Link dual-tap output (8-bit/10-bit selectable) plus analog output
- Partial scan and binning modes up to 3205 frames per second
- Full-frame shutter to 1/64,000 sec.
- Asynchronous reset, no-delay shutter
- GUI interface or serial commands for camera control
- Built-in pattern generator
- Read-out-inhibit control for multiple camera applications
- Monochrome or color



Specifications for TM-6740CL/TMC-6740CL

Specifications	TM-6740CL/TMC-6740CL
Sensor	1/3" progressive scan interline transfer CCD
Active area	4.74mm x 3.55mm
Active pixels	640 (H) x 480 (V)
Cell size	7.4 μm x 7.4 μm
Readout modes	A 640 (H) x 480 (V) @ 200 Hz (full image) B 640 (H) x 160 (V) @ 540 Hz (partial scan) C 224 (H) x 480 (V) @ 500 Hz (partial scan) D 224 (H) x 160 (V) @ 1250 Hz (partial scan)
Synchronization	Horizontal and vertical 2x and 4x binning independently selectable Internal/External auto switch HD/VD, 4.0 Vp-p impedance 4.7K Ω VD = frame rates ± 2%, non-interlace HD = 100 kHz/200 kHz ± 2%
Pixel clock	40.00 MHz
S/N ratio	>50 dB
Sensitivity	Mono 1.4 lux f=1.4 (no shutter) @ 200 fps, Color 11.0 lux f=1.4 (no shutter) @ 200 fps, Pixel sensitivity: 30 μV/e-
Video output	Analog 714 mV, 75 Ω (650 mV white clip) Digital software selectable 8-bit x 2-tap Base Camera Link 10-bit x 2-tap Base Camera Link
Color (RMC/TMC-6740 only)	Raw Bayer output for host-based interpolation
Gamma	Programmable LUT (1.0 std)
Lens mount	C-mount (use 1/3" format lenses)
Power	12V DC ± 10%, 270 mA (typical at 25° C)
Operating temperature	-10° C to 50° C
Vibration	7 Grms (10 Hz to 2000 Hz) Random
Shock	70 G, 11 ms, half-sine
Dimensions (H x W x L)	51 mm x 51 mm x 74 mm
Weight	162 g (without tripod)


GUI Interface

A user-friendly GUI (graphical user interface) is provided. This interface allows users to control the following functions of the TM-6740CL camera:


- Shutter control for manual, async. and pulse-width control
- Gain control
- Offset control
- Save settings
- Load settings
- Report settings
- LUT setting and graphic display
- Scanning mode selection and option selections
- Channel auto balancing

Camera parameters can be uploaded from the PC to the camera. Once these parameters are stored in EEPROMs, an instantaneous change from one setting to another can be done with a delay of few frames in between.


Software available for download at www.jai.com

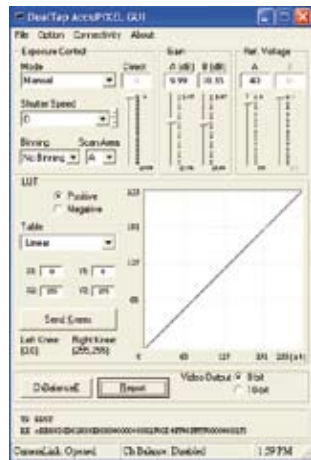

Spectral Response

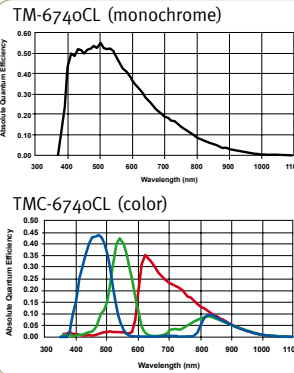

Connector Pin-out

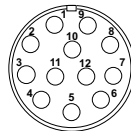

12-Pin Connector

- | | |
|-----------------|--------------|
| 1 GND | 7 NC/VD in* |
| 2 +12V DC | 8 Strobe out |
| 3 GND (analog) | 9 NC/HD in* |
| 4 Video out | 10 NC |
| 5 GND (digital) | 11 NC/INTEG* |
| 6 NC/VINIT in* | 12 NC |
- *Option 25-2 TTL inputs on 12-pin


Shutter Speed

	Manual	Async
0	1/frame rate	no shutter
1	1/250	1/64,000
2	1/500	1/32,000
3	1/1,000	1/16,000
4	1/2,000	1/8,000
5	1/4,000	1/4,000
6	1/8,000	1/2,000
7	1/16,000	1/1,000
8	1/32,000	1/500
9	1/64,000	pulse width control

Ordering Information

Camera	
Lead Processing	TM-6740CL (mono), TMC-6740CL (color)
RoHS Compliant	RM-6740CL (mono), RMC-6740CL (color)
Optional Functions	
Internal IR Cut Filter Added	OP3-1
Optical Filter Removal	OP3-2 (color only)
Glassless CCD Imager	OP21
Ultraviolet Imager (quartz window)	OP21-QUV (monochrome only)
TTL Inputs on 12-pin	OP25-2
Optional Accessories (must be ordered separately)	
I/O	26CL-02-26
Power Cable	12P-02S
Power Supply	PD-12UUUP (includes power connector)
Tripod Mounting Kit	TP-20

Dimensions

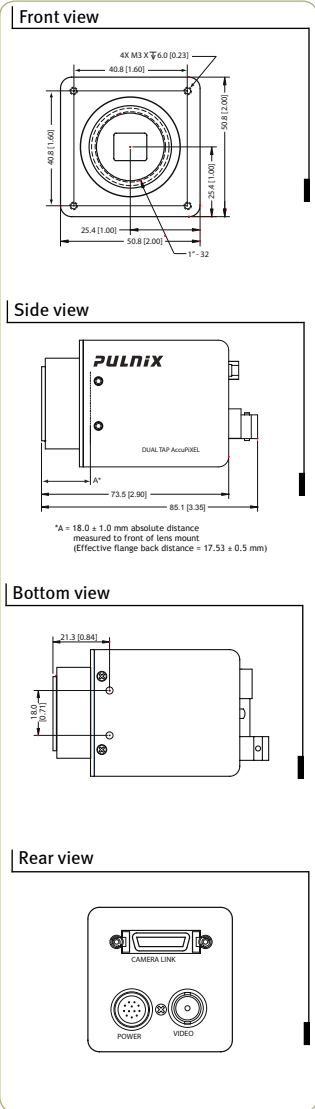

Company and product names mentioned in this datasheet are trademarks or registered trademarks of their respective owners. JAI-A-S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to products and documentation without prior notification.

Europe, Middle East & Africa
Phone +45 4457 8888
Fax +45 4491 3252

Asia Pacific
Phone +81 45 440 0154
Fax +81 45 440 0166

Americas
Phone (Toll-Free) 1 800 445 5444
Phone +1 408 383 0300

Visit our web site on www.jai.com

See the possibilities

