



**For Security
Fish-Eye**

FE185C086HA-1

Applicable camera (model)


1	2/3	1/2	1/3	1/4
---	-----	-----	-----	-----



*Photograph is a similar model.

- High-resolution design, providing support for up to 5 megapixel camera resolution.
- Super wide angle of 185 degrees that eliminates dead angles and enables effective, wide-area surveillance.
- Designed with the f-theta system, most suited for uniform displaying of images. Allows high-quality image display, partial enlargement, and conversion to ordinary-looking images to be performed easily with imaging software.

FIXED Fixed Focal	Fish-Eye 185° Fish-Eye	5 Mega For Megapixel Camera	MANUAL Manual Iris	C-mt C Mount	METAL Metal Mount
-----------------------------	----------------------------------	---------------------------------------	------------------------------	------------------------	-----------------------------

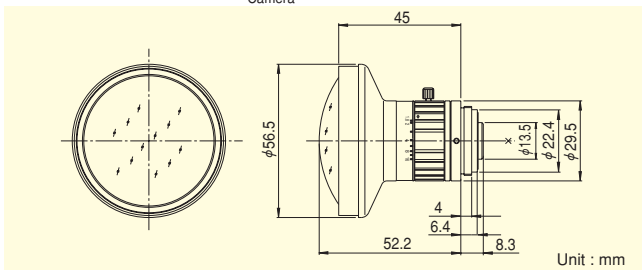

Focal Length (mm)		2.7
Iris Range		F1.8 ~ F16
Operation	Focus	Fixed
	Iris	Manual
Angle Of View (H×V)	1"	185° × 185° (φ8.6mm)
	2/3"	185° × 140°35'
	1/2"	136°18' × 102°19'
Focusing Range (From Front Of The Lens) (m)		∞ ~ 0.2
Back Focal Distance (in air) (mm)		9.75
Exit Pupil Position (From Image Plane) (mm)		-49
Filter Thread (mm)		—
Mount		C
Mass (g)		160
Remarks	•With Metal Mount •With Locking Knob for Iris	

[Fish-Eye Lens Image]

